

KT09103 1995-2006 Toyota 2 1/2" Lift Kit 6 Lug 2WD/4WD

Tech@DaystarWeb.com
Phone: 623.907.0081
Fax: 623.907.0088
841 South 71st Avenue
Phoenix, AZ 85043

www.DaystarWeb.com
Tech Support Contact Info



Bill of Materials		
M03272	Coil Spring Spacer	2
M03271	Coil Spring Isolator	2
S10762	M10-1.25X 50mm Stud	6
S10518	10mm Nylock Nut	6


INSTALLATION INSTRUCTIONS FRONT

- Read complete instructions before beginning installation, the following special tools are recommended: Coil spring compressor, floor jack, ball joint separator, jack stands, bench vise, and metric hand tools.
- 2. Jack the vehicle in the center of the front cross member.
- Support the vehicle by placing jack stands on the frame cross member so that the front tire/wheels are off the ground.
- 4. Remove the front tires/wheels.
- Disconnect the sway bar end links and remove the upper ball joint cotter pin and nut.
- Separate the upper ball joint from the spindle. (Using ball joint separator or a suitable tool, be careful NOT to damage the ball joint boot)
- Remove upper strut tower nuts holding strut assembly to strut tower (3) on each side of vehicle.
- Remove the lower strut bolt from the lower control arm and remove the strut assembly from the vehicle. (Note the direction of the bolt for reinstallation)
- Compress the coil spring on the strut assembly with a suitable coil spring compressor so that the coil spring has about 3/8" play in the strut and remove the upper strut isolator mount nut.
- 10. Remove the coil spring isolator from the upper strut mounting plate.
- Replace the upper strut mounting plate studs with the supplied 10mm longer studs S10762 with a bench vise and a deep well socket. (3 on each side)
- Install the supplied coil spring isolator MO3272 to the upper strut mounting plate.
- 13. Reinstall the compressed coil spring onto the strut assembly and reattach the upper strut mount plate using the stock hardware. See diagram. Torque upper strut mounting plate nut to 18 foot-pounds.
- 14. Decompress the coil spring in the strut assembly. Make sure that the spring is seated correctly into the strut assembly alignment indentation at the bottom of the strut and the top isolator.
- Slide the coil spring spacer M03271 onto the top of the strut assembly over the 10mm studs.
- Install the strut assembly into the strut tower and start the upper three 10mm lock nuts S10518. (Make sure that the bottom of the strut is aligned as well)
- 17. Install the lower strut bolt in the original position and torque to 100 foot-pounds. (Step 8)
- 18. Using the floor jack, raise the lower control arm and connect the upper ball joint on the upper control arm to the spindle. Torque nut to 80 ft lbs. and make sure that you replace the cotter pin. (Not supplied)
- 19. Install the front tires/wheels.
- 20. Lower the vehicle onto the ground and tighten the upper strut tower 10mm nuts S10518. Torque to 35 foot-pounds. (3 on each side)
- 21. Do a wheel alignment after lift install.
- 22. RETORQUE ALL BOLTS AFTER 500 MILES.

WARNING

This vehicle has been modified to enhance its performance. The steering, braking and handling of this vehicle will differ from standard passenger cars and trucks, This vehicle handles differently from an ordinary vehicle in driving conditions which may occur on streets, highways and off road. Avoid unnecessary abrupt maneuvers, sudden stops, sharp turns and other driving conditions that could cause loss of control, possibly leading to a roll over or other accident that could result in serious injury or death to driver and passengers. If larger tires are installed the speedometer will read lower than the vehicles actual speed. **DRIVE WITH CARE, REDUCE SPEED AND WEAR SEAT BELTS AT ALL TIMES.**

This kit should be installed by a professional mechanic

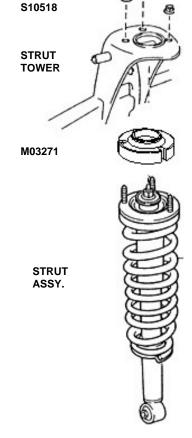



NUT

