
INSTALLATION GUIDE

AMP RESEARCH BOUCSSEP


APPLICATION	LENGTH	MODEL YR	PART #
Ford F-250 / F-350 / F-450 Regular Cab *	(48")	2002-2003, 2008 - 2016	75134-01A
Ford F-250 / F-350 / F-450 Super Cab *	(60")	2002-2003, 2008 - 2016	75134-01A
Ford F-250 / F-350 / F-450 Crew Cab	(79")	2002-2003, 2008 - 2016	75134-01A
Ford Excursion	(79")	2002-2003, 2008 - 2016	75134-01A

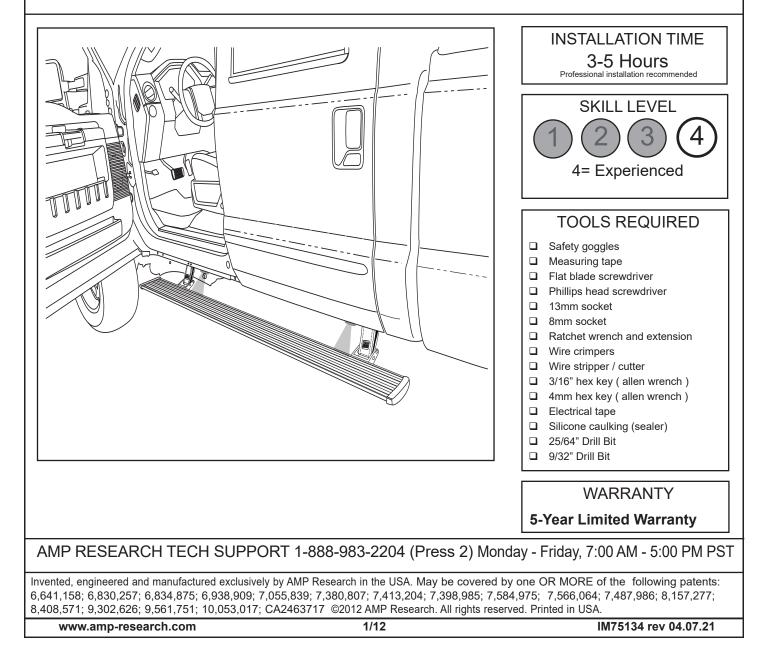

INSTALLATION GUIDE

Attaching motor to linkage assembly

The motors must be attached to the linkage assemblies before continuing the installation process.

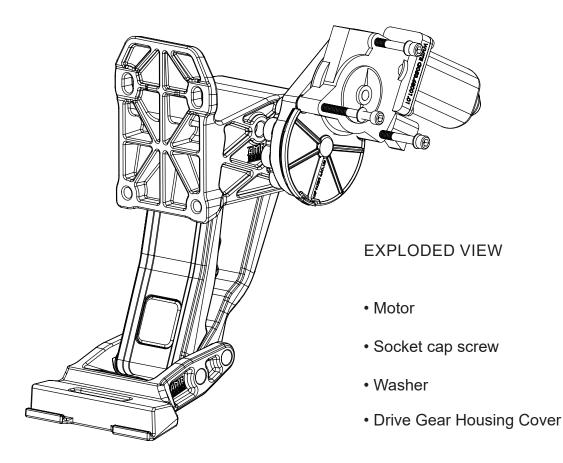

CAUTION: HANDLE WITH CARE.

To ensure our customers receive all components with full integrity, we pack the motors separate from their linkage assemblies. This requires that the installer position and fasten the motor before continuing with the install. Please follow the instructions below and handle the assembly carefully.

CAUTION: Dropping the assembly or any excessive impact MAY cause damage to the motor.


Instructions:


1. Position the gear cover in place as shown if not already in place.

2. Seat motor into position on the three mounting bosses. This may require an adjustment of the gear by moving the swing arms.


3. After seating into place, fasten the motor with the three motor mount screws with 4mm Hex Head. Tighten screws to 36 in-lbs (4N-m). **Do not over torque.**

www.amp-research.com

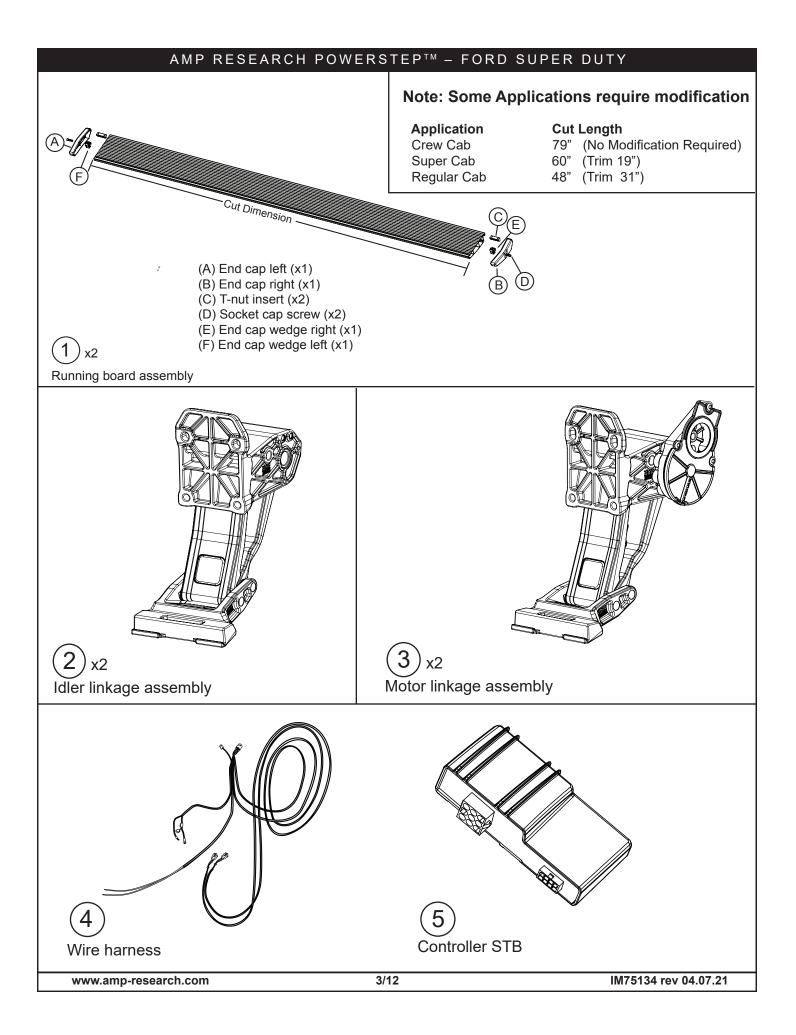

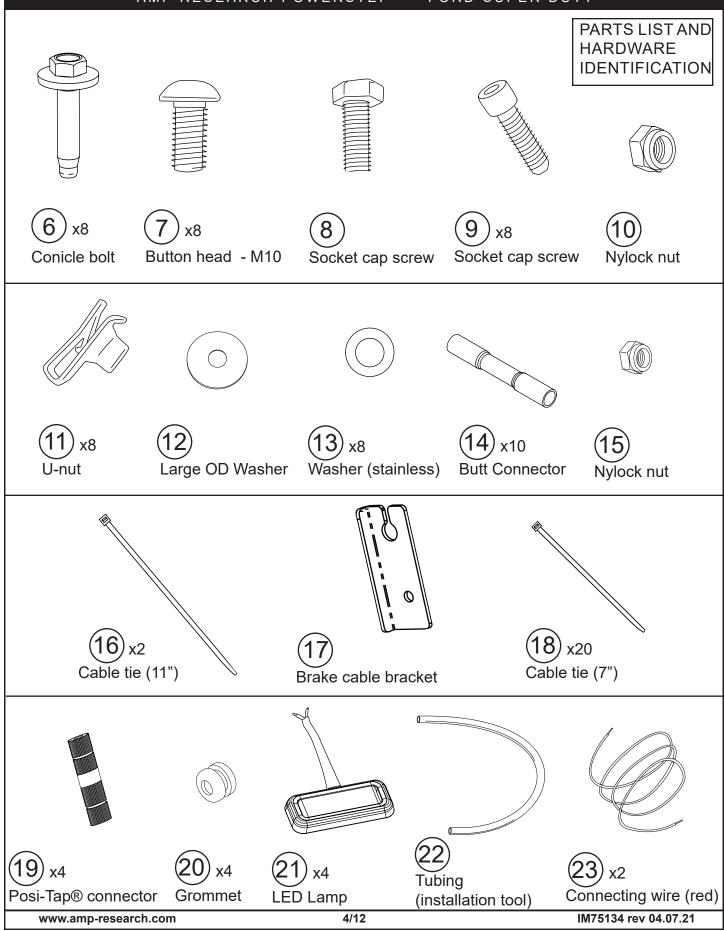


AMP RESEARCH POWERSTEPTM - FORD SUPER DUTY

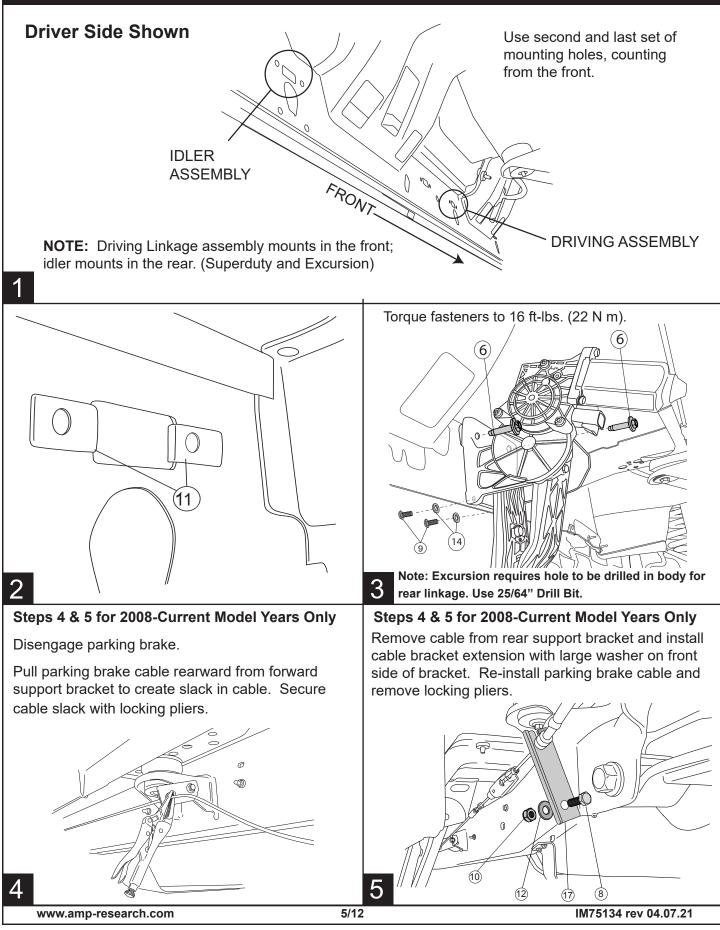


AMP RESEARCH POWERSTEP[™] - FORD SUPER DUTY


Remove fuse from harness.

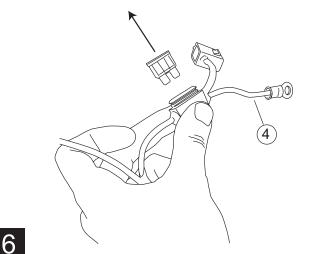


Secure controller to vehicle wire loom beside battery (on passenger side) and connect both Power Step wire harness connectors to connectors on controller. Secure locking tabs on connectors.

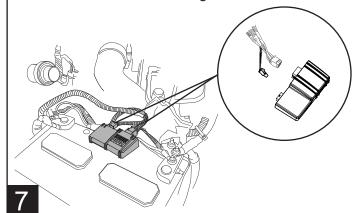



Connect power and ground for controller to battery, Red to positive and Black to the negative lead. Route harness legs down over wheel wells toward motor linkages, long leg across front and over to driver side. Secure all loose sections of the harness with cable ties.

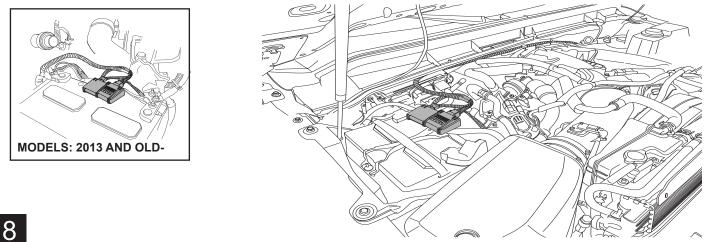


Run wire legs down and along underside of vehicle floor, securing with tie wraps. Run trigger wires (4) on passenger side through grommet as shown bellow.

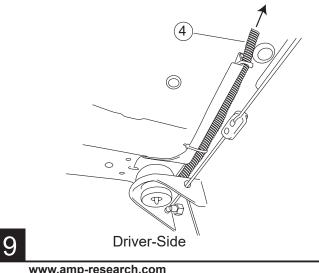

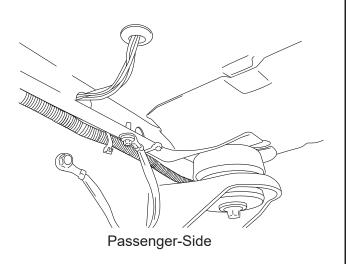

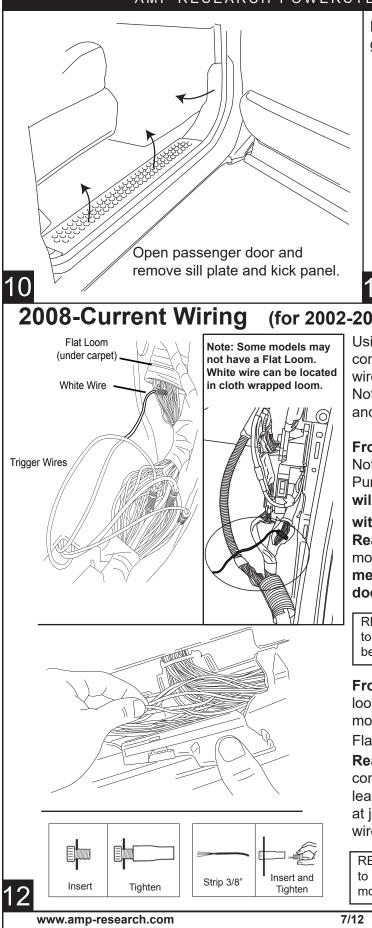

Roll back carpet and pull trigger-wire through grommet. Use silicone glue to seal holes in grommet.

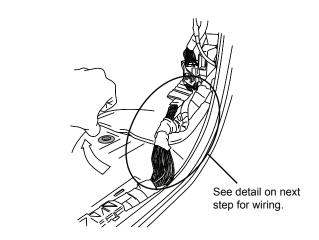

(for 2002-2003 models skip to step 13)

Using supplied PosiTaps[®], connect trigger wires into corresponding door ajar wires. The Power Step trigger wires color coordinate with the factory door ajar wires. Note the differences explained below for Regular Cab and Super Cab.

Front Driver-Side Door: Dark Green with Purple stripe Note: Some later models will have a Light Green with Purple stripe. Using an Ohm meter the correct wire will ground when the front door is closed and OL

with the front door open.

Rear Driver-Side: Dark Green Note: Some later models will have a Light Green wire. Using an Ohm meter the correct wire will ground when the rear door is closed and OL with the rear door open.

REGULAR CAB/SUPER CAB NOTE: Connect this wire to front door wire also (Dark Green w/ Purple stripe) because these models don't have rear door ajar wires.

Front Passenger-Side: White... found just below flat loom as shown in the illustration above. Some later models may not have a Flat Loom. See image for no Flat Loom models.

Rear Passenger-Side: Yellow ... the correct yellow wire continues on to back door. Pull on the yellow wire that leads to the back and does not cross over to driver side at junction; you'll notice the movement of the correct wire up where we connect our trigger wires.


REGULAR CAB/SUPER CAB NOTE: Connect this wire to passenger front door wire also (White), because these models don't have rear door ajar wires.


NOTE: Steps 13-23 are only for model years 2002-2003 with factory remote keyless entry. For all other model years continue to step 24.


2002-2003 model year trucks require that the Green and Green/Violet wires be routed over to the driver side of the vehicle. Attach extra wire length to both wires on the harness (Green and Green/Violet), and run under carpet from passenger side to driver side.

Open driver side door and remove sill plate and kick panel. Lift carpet and pull trigger wires to driver side.


13

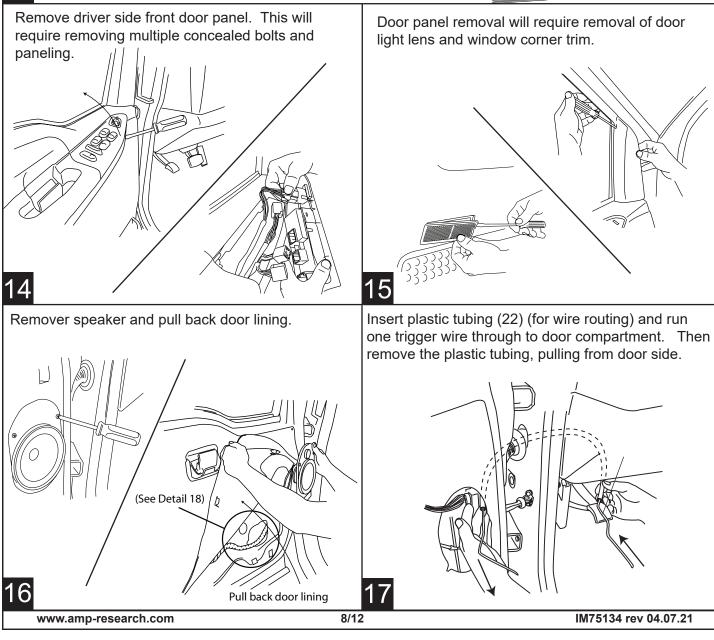

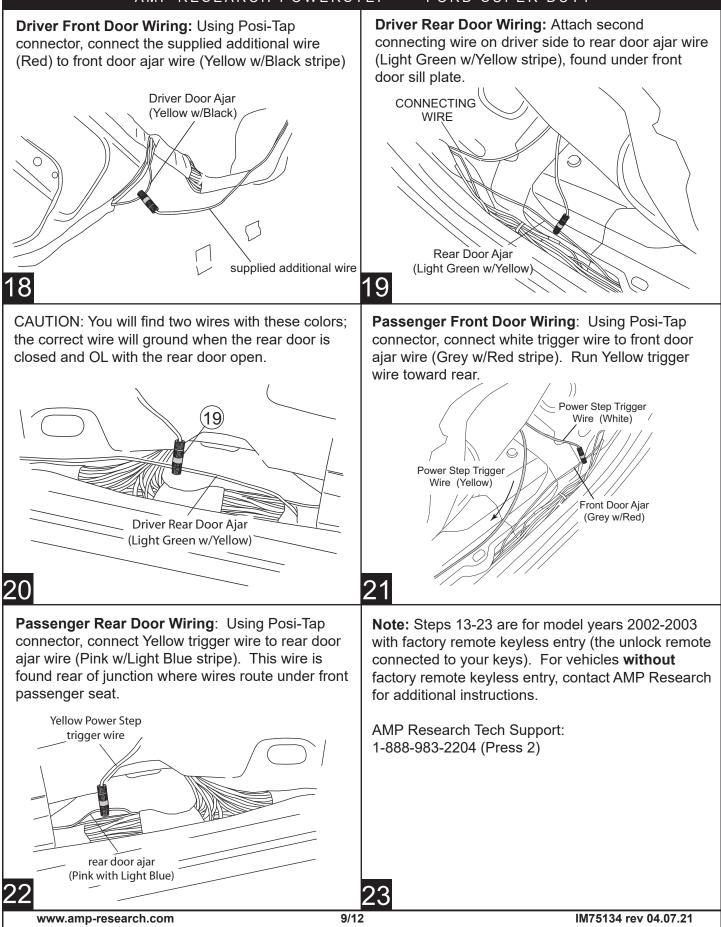

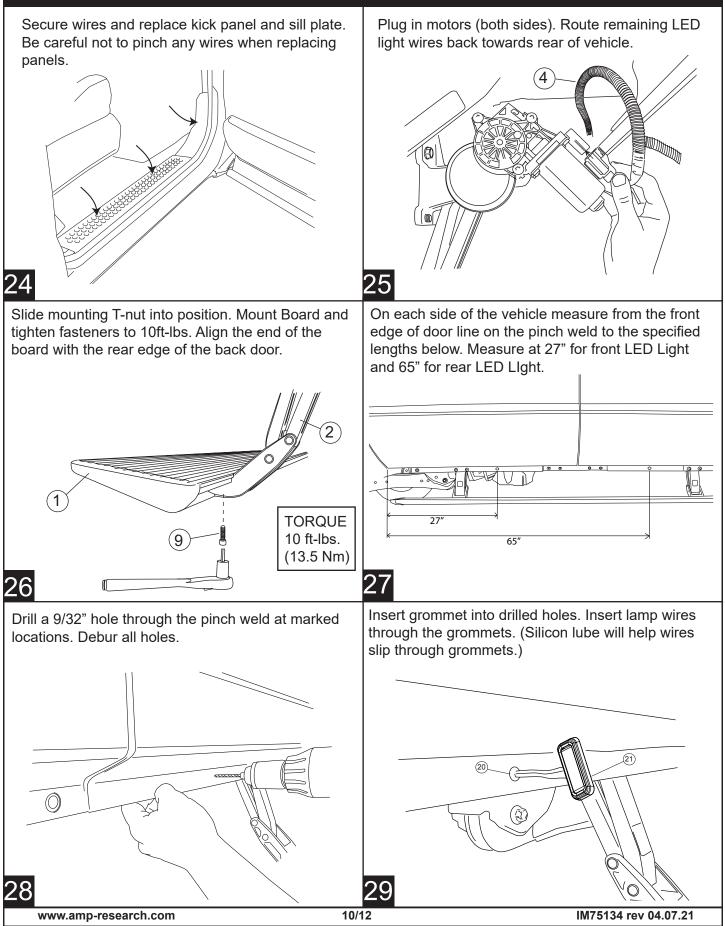


AMP RESEARCH POWERSTEP[™] - FORD SUPER DUTY

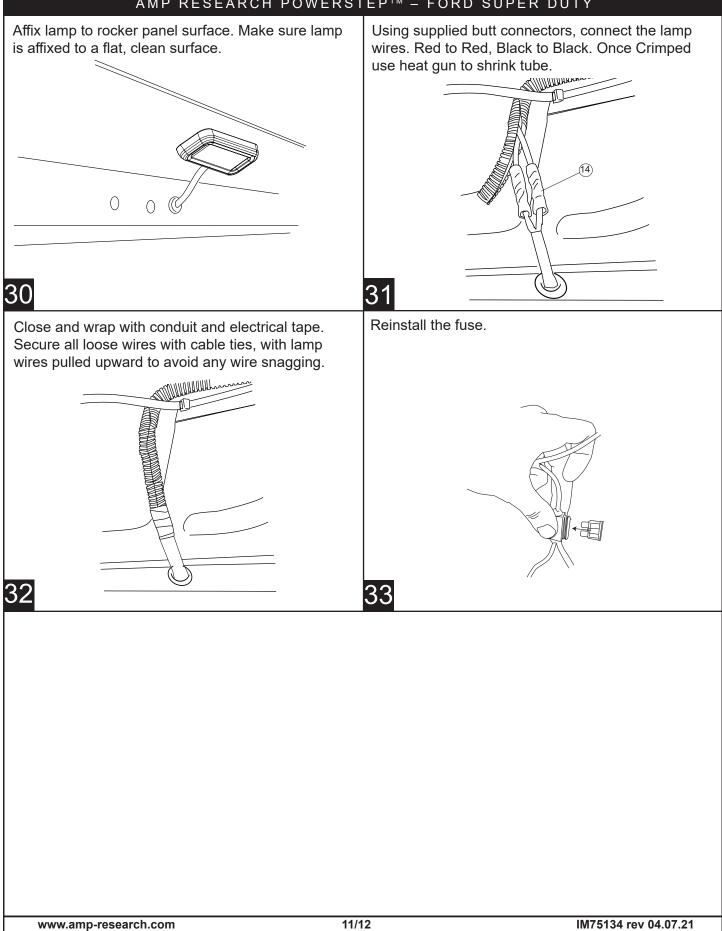

AMP RESEARCH POWERSTEPTM - FORD SUPER DUTY

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

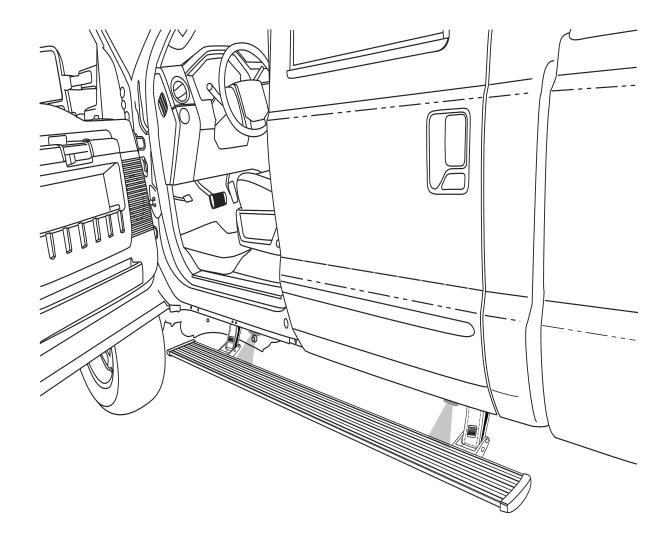

FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close. **NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. **Note that** *there is a 2-second delay before the PowerStep returns to the stowed/retracted position.* **CORRECT OPERATION OF LIGHTS:** All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reillumintated by closing and opening any door of vehicle.

www.amp-research.com

IM75134 rev 04.07.21

AMP RESEARCH POWErStep

AMERICAN DESIGNED, ENGINEERED AND MANUFACTURED.

Thank you for your recent AMP Research Purchase.

REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit:

www.amp-research.com/productregistration or scan the QR Code



Product Registration Benefits:

• Ensure we have your purchase receipt and product info in our system which is required for warranty

• Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support

Registration helps us keep you up to date on product information and offers

To view other Amp Research products that may be offered for your vehicle. **Please visit: www.amp-research.com**

Rev 01.05.21

атар Research Power Step

Congratulations on your purchase of the genuine AMP Research PowerStep! Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.



Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. <u>Avoid spraying the motors directly.</u> After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All® to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH CUSTOMER SERVICE 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.



